 




Portable Video Player

# USER MANUAL

IK-103

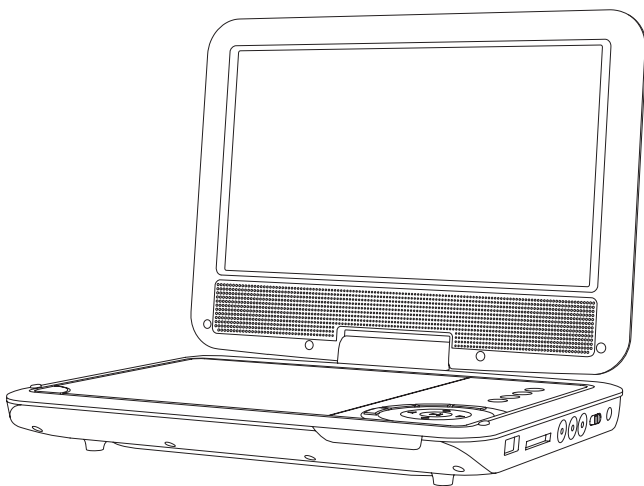

After-sales Email: [vp-service@iegeek.com](mailto:vp-service@iegeek.com)



How to Get a **12-Month** warranty contact us to register it within **3 weeks** after receiving your player.  
Enjoy your New DVD player!



Email us: **[vp-service@iegeek.com](mailto:vp-service@iegeek.com)**

# CONTENT

 
01	USEFUL TIPS.....	1
02	PRODUCT DESCRIPTION .....	3
03	CONNECTION .....	8
04	SETUP PAGE .....	9
05	SPECIFICATIONS.....	13
06	TROUBLESHOOTING .....	15
07	WARRANTY.....	17
08	WARNING.....	18

# 01/USEFUL TIPS


**1. Battery.** Please recharge the Battery for at least 6 hours before the initial use. If you connect this player with AC power, you can use it directly.

**Note:** Make sure you switch off the unit before charging. The charging indicator LED will change from RED to OFF to indicate that the battery has been fully charged. When the unit is on, the LED turns GREEN.

**2. LCD Screen.** If you find scratches on the screen, just remove the screen protector.

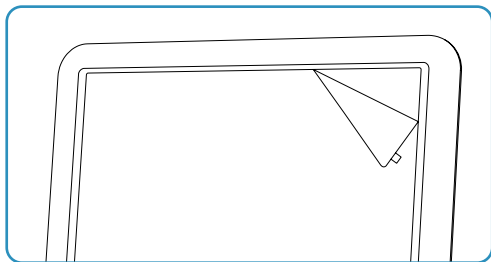

**3. Laser Pickup.** There is a yellow card inside the player. Before you insert a disc, please remove the card. **please DO NOT touch the laser pick up or other parts with your hand.**

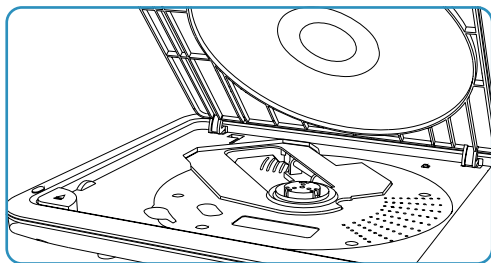 

**4. Disc Format.**

 
Disc Format Supported	CD, DVD, DVD + R/-R, DVD + RW/-RW, VCD, SVCD, CD-R/RW
Disc Format NOT Supported	Blu-ray, HD DVD, Discs recorded in the AVCHD format, DVD-Audio, version 1.0 of DVD-RW, DVD-ROM, CD-ROM, CDV, CD-G, SACD, Photo CD, DVD-RAM that cannot be removed from their cartridges, 2.6-GB and 5.2-GB DVD-RAM, PAL discs.

**5. Language Settings.** Press key [SET UP] > [LANGUAGE SETUP] > [OSD Language] change the display language. It is the same procedure for Audio, subtitles and Menu.

**6. About the Game.** If you want to play games on our device, please check the free drop box link below: <https://sourl.cn/XVcBpM>.

**7. About the Maintenance.**


- Wipe with a soft, dry cloth to clean this unit.
- Use eyeglass cleaner to remove stubborn dirt from the LCD.
- Do not use alcohol, paint thinner or benzine to clean it.
- Do not press onto the LCD screen or drop the product from a high place.
- This unit is not waterproof. To prevent a fire, do not place any container filled with liquid near this unit (such as a vase or flower pot) or expose it to dripping, splashing, rain or moisture.

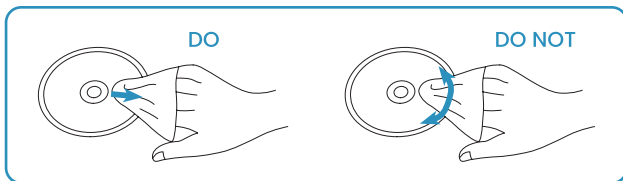


- To clean discs, wipe with a damp cloth and then wipe dry.
- DO not attach labels or stickers to any discs (This may cause disc warping, making it unusable).
- DO not write on the discs with a ball-point pen or any other writing instrument.
- To protect discs from scratches and dirt, please return them to their cases or cartridges when they are not in use.
- DO not use discs that are badly warped or cracked, or irregularly shaped discs, such as heart shapes.

# 02/PRODUCT DESCRIPTION

 
## Package Contents

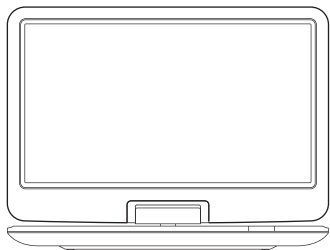


Portable Video Player

 


Remote Controller

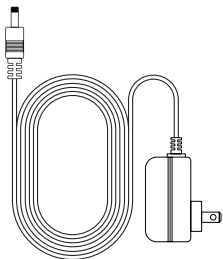 

AC Adapter

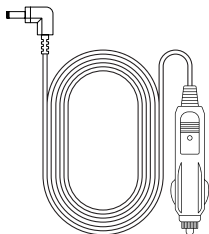 


Car Charger

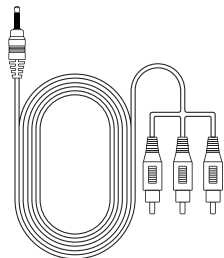 



3-in-1 AV Cable
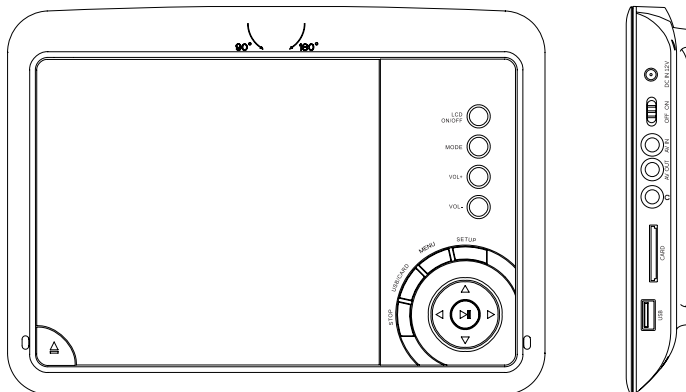 
## Button Introduction




<b>LCD ON/OFF</b>	Turn the unit screen on and off.
<b>VOL -/VOL +</b>	Controls the volume up or down.
<b>STOP</b>	Press to stop current video.
<b>MENU</b>	Press to return to the root menu for DVD.
<b>MODE</b>	Press repeatedly to switch the mode for AV IN or DVD.
<b>SETUP</b>	Press to enter the setup menu, then use the direction keys and OK to set the system menu.
<b>Direction Keys</b>	Use direction keys for: previous/next, fast forward /fast rewind.
<b>OK</b>	Press to enter the selected item or the choice.
<b>DVD/USB/SD</b>	Press repeatedly to switch input source: Disc/USB mode/SD card.
<b>FWD/REV</b>	Press to achieve fast/rewind forward.



<b>Remote Control Receiver</b> 	Align this position when using the remote control.
<b>Charge light</b> <b>IR</b>	Red: Charging Not Red: No charging or fully charged.
<b>Power light</b> 	Green: Power ON Not Green: Power OFF. Red and Green---Power ON while charging

## Remote control Instruction

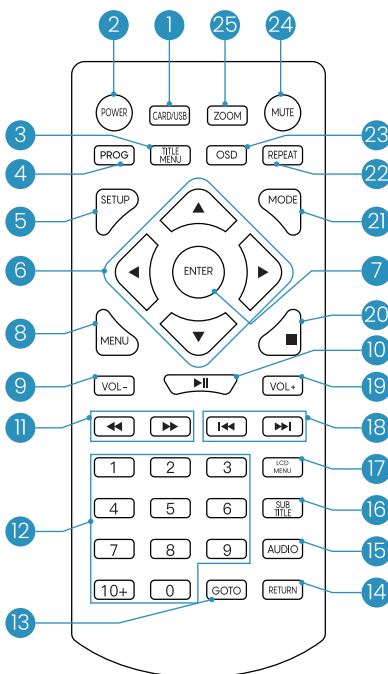 

1	CARD/ USB	2	POWER
3	TITLE MENU	4	PROG
5	SETUP	6	DIRECTION BUTTON

7	ENTER	8	MENU
9	VOL -	10	PLAYER/PAUSE
11	Fast Forward/Fast Rewind	12	0-10+ Number keys
13	GOTO	14	RETURN
15	AUDIO	16	SUBTITLE
17	LCD MENU	18	PREV/NEXT
19	VOL +	20	PAUSE
21	MODE	22	REPEAT
23	OSD	24	MUTE
25	ZOOM		


1. **CARD/USB:** Switch between DVD, CARD and USB modes.
2. **POWER:** Turn the unit on and off.
3. **TITLE MENU:** All program titles can be displayed.
4. **PROG:** Program a loaded disc to play chapters and titles or tracks in a specified order.
5. **SETUP:** Show Setup menu directly. (except the AV mode)
6. **DIRECTION BUTTON**  
 Selection/Enter, Frame-by-frame
  - To select: Press up, down, left, or right ([▲, ▼, ◀, ▶])
  - To enter: Press [OK]
  - Frame forward/ Frame backward: (while paused) press left or right ([◀, ▶])
7. **ENTER:** Press to confirm option.
8. **MENU:** View the main menu on a loaded DVD.
9. **VOL -:** Decrease volume, minimum to 0.
10. **PLAYER/PAUSE:** Play or pause the audio/ movie playback. Confirm the selection or press it to select the file to play.
11. **Fast Forward/Fast Rewind:** Select fast forward/rewind speed.
12. **0-10+Number Keys:** Press number to input a DVD chapter or CD track. (invalid for some discs)
13. **GOTO:** Press to go to a specific time index/title/chapter.
14. **RETURN:** During DVD play, press this key, to main menu.
15. **AUDIO:** Press to switch the left and right channels.
16. **SUBTITLE:** Change subtitle mode.
17. **LCD MENU:** Press to adjust image settings such as brightness, contrast, hue, and saturation.
18. **PREV/NEXT:** Press to play previous chapter/title/track.
19. **VOL +:** Increase volume, maximum to 15.
20. **PAUSE:** Stop the audio/video/photo playback.
21. **MODE:** Select "DVD" mode or "AV IN" mode.
22. **REPEAT:** Repeat the loaded disc.

23. **OSD:** Display audio and video information such as title play time, etc.

24. **MUTE:** Mute the sound. (Press again to activate the sound)

25. **ZOOM:** Short press to select 2X, 3X, 4X, 1/2, 1/3, 1/4.

## Range of use

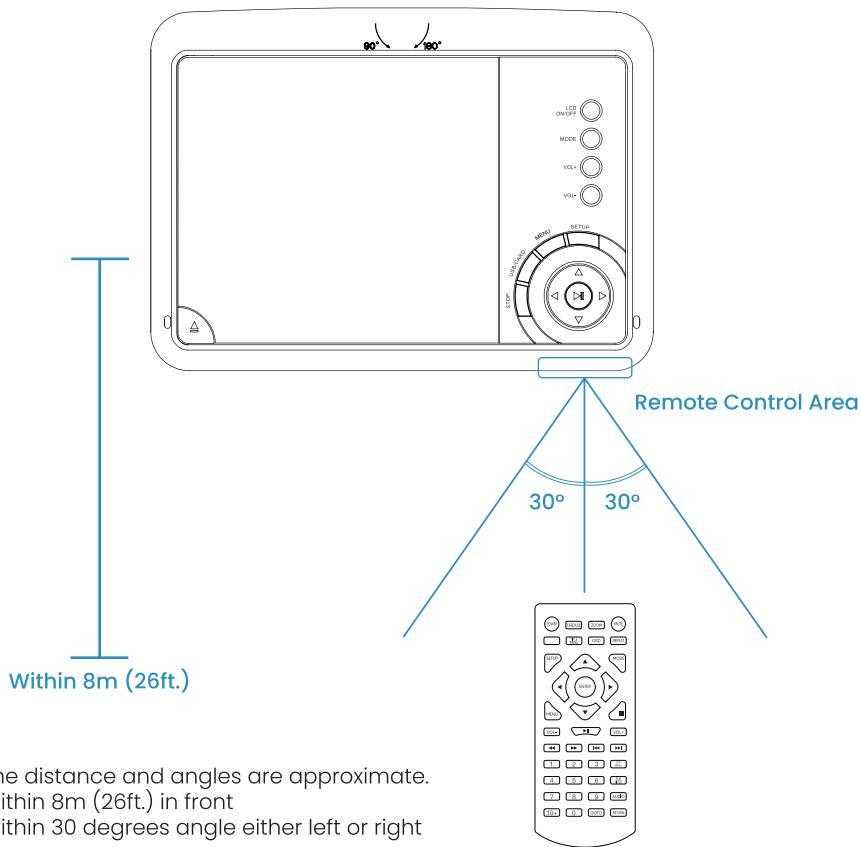 

The distance and angles are approximate.

Within 8m (26ft.) in front

Within 30 degrees angle either left or right

# 03/CONNECTION

## Enjoy Fun with a Game Controller

 
You can play multiple classic games with a game controller (not included in the package). Before playing, please download games via this website below.

**https://sourl.cn/XVcBpM**

Here are the instructions about how to play games on a DVD player:

1. Use your PC to download games from the attachment file.
2. Unzip the NES file folder to your PC, and copy the folder to a USB stick (16GB to 32GB).
3. Plug the USB stick into the right-side USB slot and plug the game joystick into the backside USB slot.
4. Turn on the player and press "USB/SD card", choose "USB" mode.
5. Find "NES\_game" from the "menu" then select the game to start playing.
6. If you want to play other games, press the "SELECT" and "START" buttons for the joystick to exit back to the game menu.

## Enjoy Fun with a Television

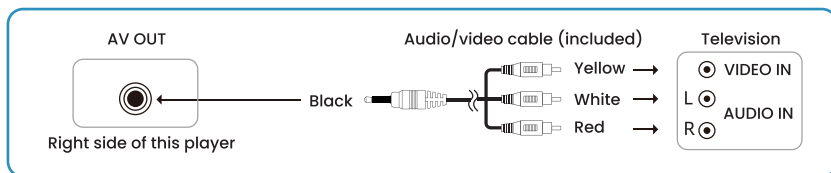


# 04/SETUP PAGE

## Menu Operation

1. Press [SETUP] on the remote control or on the unit to show the setup menu.
2. Press [UP] / [DOWN] to select an item. The submenu of the selected item will be instantly shown, then press [RIGHT] to enter.
3. Press [UP] / [DOWN] to select an item in the submenu, then press [RIGHT] / [ENTER] / [OK] to enter. Use [UP] / [DOWN] to select an option, then press [RIGHT] / [ENTER] / [OK] to confirm it or press [LEFT] to cancel.
4. Press [UP] / [DOWN] to continue to set other items in the submenu.
5. Press [LEFT] to go back to the superior menu of the current one.
6. Press [SETUP] again to exit the setup menu.
 
## SYSTEM SETUP

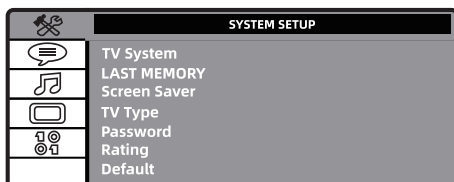

### [TV System]

Set TV Type to NTSC, PAL or Auto.

### [Last Memory]

1. **ON:** Each time you turnoff the unit or stop the disc, it will memorize the last play duration. Next time you turn on the unit and play the same disc, the unit will play from that memorized point.
2. **OFF:** Disable the last memory function.

### [Screen Saver]

1. **ON:** If the image remains motion less on the screen, for several minutes, a screen saver will appear on the screen. you can press any key or button to wake it up.
2. **OFF:** Turn off the screen saver function.

### [TV Type]

#### 1. 4:3 Normal / PS PANSCAN

If the unit is connected to a conventional TV set, the wide-screen image will be displayed on the screen in its native aspect ratio with some part on the left and right cut off.

## 2. 4:3 Normal / LB LETTERBOX

If the unit is connected to a conventional TV set, the wide-screen image will be displayed in its native aspect ratio with black borders on the top and the bottom side.

## 3. 16:9 wide

Select this option if the unit is connected to a wide-screen TV set. The wide-screen image will be displayed in full screen in its native aspect ratio while the 4:3 image will be stretched out horizontally to fit in the screen.

### [Password]

Enter the default password "0000" then set your password.

### [Rating]

 
When setting a rating level, a password screen is shown.

Follow the on-screen instructions. Do not forget your password.

### [Default]

Return the portable DVD to factory default beyond the maximum output of the speaker in sound effects processing.

## LANGUAGE SETUP

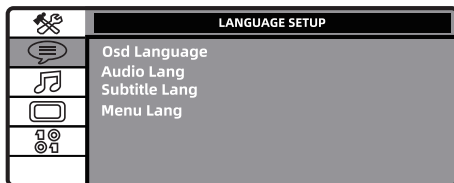

### [OSD Language] (on-screen display language)

 
Set this on-screen display language in this item.

[Audio Language] Set the default audio language.

[Subtitle Language] Set the subtitle language.

[Menu Language] Set the disc menu language.

## AUDIO SETUP

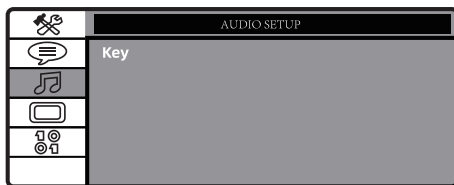

### **[KEY]**

The key function is used to adjust the audio equalization or sound characteristics. It allows you to adjust the key of the audio from # to b, enabling you to fine-tune the balance of different frequencies in the audio output.

## VIDEO SETUP



The video setup allows you to change the display properties of the DVD.

**[Brightness]** Adjusts the screen brightness.

 
**[Contrast]** Adjusts the screen contrast.

**[Hue]** Adjusts the screen hue.

**[Saturation]** Adjusts the screen saturation.

**[Sharpness]** Adjusts the screen sharpness.

## DIGITAL SETUP

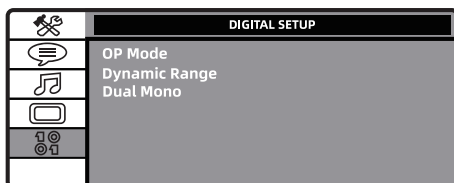

### **[Output Mode]**

The output mode allows you to select different audio/video signal output methods.

#### **1. Line Out**

Separate a soundtrack into two independent ones. This mode can be regarded as night mode. For playing AC-3 DVD discs, the volume will be lower than RF OUT.

## 2. RF Remod

Combine two soundtracks into one. This mode can be regarded as a day mode. For DVD discs playing AC-3, the volume is higher than the Line Out.

**[Dynamic Range]** Full 6/8, 4/8, 2/8, OFF

**[Dual Mono]** Set down Stereo, Mono L, Mono R, Mix-Mono.

# 05/SPECIFICATIONS

## DIVX Playback

DIVX is a video (movies and video) recording format, which is commonly known as AVI.

DIVX disc features high quality that is comparable with the DVD's and larger capacity. For example:

<b>1.5H movie</b>	In MPEG-1/2format	In DivX
<b>DVD (MPEG-2)</b>	About 1.5-2GB	About 600-800MB
<b>VCD (MPEG-1)</b>	About 800MB-1G	About 600-800MB

## Difference among MPEG 1, MPEG2 and MPEG4

	<b>MPEG 1</b>	<b>MPEG 2</b>	<b>MPEG 4</b>
<b>Speed(kb/s)</b>	1380kb/s (352*288)	6500kb/s	8800kb/s (720*576)
<b>Quality</b>	Good	Excelled	Perfect
<b>Hardware</b>	LOW	Medium	High

## Supported format for different files

<b>File</b>	Supported Format
<b>Compatible Disc</b>	CD-R, CD-RW, VCD, SVCD, CVD, DVD±R, DVD±RW
<b>Audio</b>	MP3, WMA, OGG, AAC (Bit rates: 32-192kbps)
<b>Video</b>	AVI, MPG, MP4, VOB, FLV, RMVB (Resolution must be within 720*576)
<b>Picture</b>	JPG
<b>E-book</b>	TXT (code: ANSI)

## Specification

<b>Compatible DISC</b>	CD, DVD, CD-R(RW), DVD±R, DVD RW, VCD, SVCD(RW)
<b>Frequency response</b>	20HZ to 20KHZ
<b>Video output</b>	1 Vp-p75 Ohm unbalanced
<b>Audio output</b>	1.4 Vrms/10 kohm

<b>Dynamic range</b>	Better than 85dB
<b>Laser</b>	Semiconductor laser, Waver length:650
<b>Power source</b>	DC9-12V 1A
<b>Battery Type</b>	Li polymer

# 06/TROUBLESHOOTING

Before contacting the customer service, please kindly check by yourself with the following chart.

Troubleshooting	Solution
The player can't read discs	<p>Please clean the laser and DVDs with the alcohol first. ( p2 )            Ensure the disc is in the right format for our DVD player.            Our player doesn't support Dolby, pirate, burnt and blu rays DVDs.            Find your product order and email to "Contact seller"  <b>(vp-service@iegeek.com)</b></p>
The player doesn't work	<p>Make sure the power switch has been set to the "ON" position.            Check connections to the AC adaptor or battery pack.            Check the status of the indicator light. Under the premise of power connection, if it's on, there is a problem with the motherboard; if it's off, there is a problem with the motherboard or power adapter.            Find your product order and email to "Contact seller"  <b>(vp-service@iegeek.com)</b></p>
Picture is distorted	<p>The disc might be damaged. Try another disc.            It is normal for some distortion to appear during forward or reverse scanning.</p>
The player doesn't read MP4 on the USB or SD card	<p>DVD player supports MP4 files in your USB Drive/SD card, but you need to convert the formats first.            You can download a converter, Format Factory, to complete the conversion. Any questions please contact customer service for more help.  <b>(vp-service@iegeek.com)</b></p>
Remote controller doesn't work	<p>Replace the battery (AAA battery).            All buttons fail: A problem with remote controller or receiver.            Individual buttons fail: Find your product order and email to "Contact seller"  <b>(vp-service@iegeek.com)</b>  <b>Note:</b> The remote controller needs to be aimed directly at the front of the video player, within 8 m and 30 degrees( p7 ).</p>

<p>The game function doesn't work</p>	<p>Check the connection to the game controller. There is a USB port on the right of the device marked "Game".          Make sure the game you download is the one shown in the link below:  <a href="https://sourl.cn/XVcBpM">https://sourl.cn/XVcBpM</a>          Follow the correct steps to play ( <b>p8</b> ).or contact customer service for more help.  <b>(vp-service@iegeek.com)</b></p>
<p>The player sound is too low.</p>	<p>Check that the two speakers of the player are working properly, cover one speaker with your hand, and check if the other speaker is sounding.          Check whether the disc you put in meets the specifications ( <b>p13</b> ). Our player does not support DTS, which is the audio track of Dolby Disc. Please try another disc (<b>not pirate, burnt, Dolby and Blu-ray discs</b>) to hear whether it will play louder.</p>
<p>No sound or distorted sound</p>	<p>The speaker is off if headphones are connected.          Make sure your DVD is placed properly and all cables are securely connected into the appropriate jack.          Audio may not be output due to how files were created.</p>
<p>Can't advance through a movie</p>	<p>You can't advance through the opening credits and warning information that appears at the beginning of movies because the disc is programmed to prohibit that action.</p>
<p>Other problem</p>	<p>Static discharges or other external interferences can cause the DVD player to malfunction. When this happens, disconnect the power plug and plug it back in. If the problem happened again, disconnect the device from main power and contact customer service or a repair shop.</p>

# 07/WARRANTY

Our company provides customers with a warrant of **12 MONTHS** from the date of purchase.

Should you experience any problems not covered by the FAQ, please don't hesitate to email us at **vp-service@iegeek.com**.

## WARRANTY EXCLUSION

The warranty will not be valid if:

1. The product has not been installed, operated or maintained in accordance with the manufacturers operating instructions provided with the product.
2. The product has been used for purposes other than its intended function.
3. The product has been used for purposes other than household use.
4. The damage or malfunction of the product is caused by any of following conditions:
  - Incorrect voltage.
  - Accidents (including liquid or moisture damage).
  - Misuse or abuse of the product.
  - Faulty or improper installation.
  - Mains supply problems including power spikes or lightning damage.
  - Infestation by insects.
  - Tampering or modification of the product by persons other than authorized service person.
  - Exposure to abnormally corrosive materials.
  - Insertion of foreign objects into the unit.
  - Used with accessories not pre-approved.

## 08/WARNING

**ENGLISH:** AVOID DIRECT EXPOSURE OF THE MACHINE TO SUNLIGHT OR PROXIMITY TO FIRE, AS THIS MAY CAUSE DEFORMATION AND DISCOLORATION OF THE DISPLAY. IT IS NORMAL FOR THE MACHINE TO HEAT UP AFTER PROLONGED USE.

**FRENCH:** ÉVITEZ D'EXPOSER DIRECTEMENT LA MACHINE À LA LUMIÈRE DU SOLEIL OU À PROXIMITÉ D'UNE SOURCE DE CHALEUR, CAR CELA POURRAIT ENTRAÎNER UNE DÉFORMATION ET UNE DÉCOLORATION DE L'ÉCRAN. IL EST NORMAL QUE LA MACHINE CHAUFFE APRÈS UNE UTILISATION PROLONGÉE.

**GERMAN:** VERMEIDEN SIE DIREKTE SONNENEINSTRALUNG ODER DIE NÄHE VON FEUER, DA DIES ZU VERFORMUNGEN UND VERFÄRBUNGEN DES DISPLAYS FÜHREN KANN. ES IST NORMAL, DASS SICH DAS GERÄT NACH LÄNGEREM GEBRAUCH ERWÄRMT.

**SPANISH:** EVITE LA EXPOSICIÓN DIRECTA DE LA MÁQUINA A LA LUZ SOLAR O LA PROXIMIDAD AL FUEGO, YA QUE ESTO PUEDE CAUSAR DEFORMACIÓN Y DECOLORACIÓN DE LA PANTALLA. ES NORMAL QUE LA MÁQUINA SE CALIENTE DESPUÉS DE UN USO PROLONGADO.

**ITALIAN:** EVITARE L'ESPOSIZIONE DIRETTA DELLA MACCHINA ALLA LUCE SOLARE O ALLA VICINANZA DEL FUOCO, POICHÉ CIÒ POTREBBE CAUSARE DEFORMAZIONI E SCOLORIMENTO DEL DISPLAY. È NORMALE CHE LA MACCHINA SI RISCALDI DOPO UN USO PROLUNGATO.

**JAPANESE:** 機械を直射日光や火の近くに置くことは絶対に避けてください。変形やディスプレイの変色の原因となることがあります。長時間使用すると、機械が熱くなるのは正常です。



ieGeek



[www.iegeek.com](http://www.iegeek.com)

ieGeek and ieGeek logo are trademarks of Shenzhen Globalebuy Co., Ltd, registered in the United States and other countries. All right reserved.